


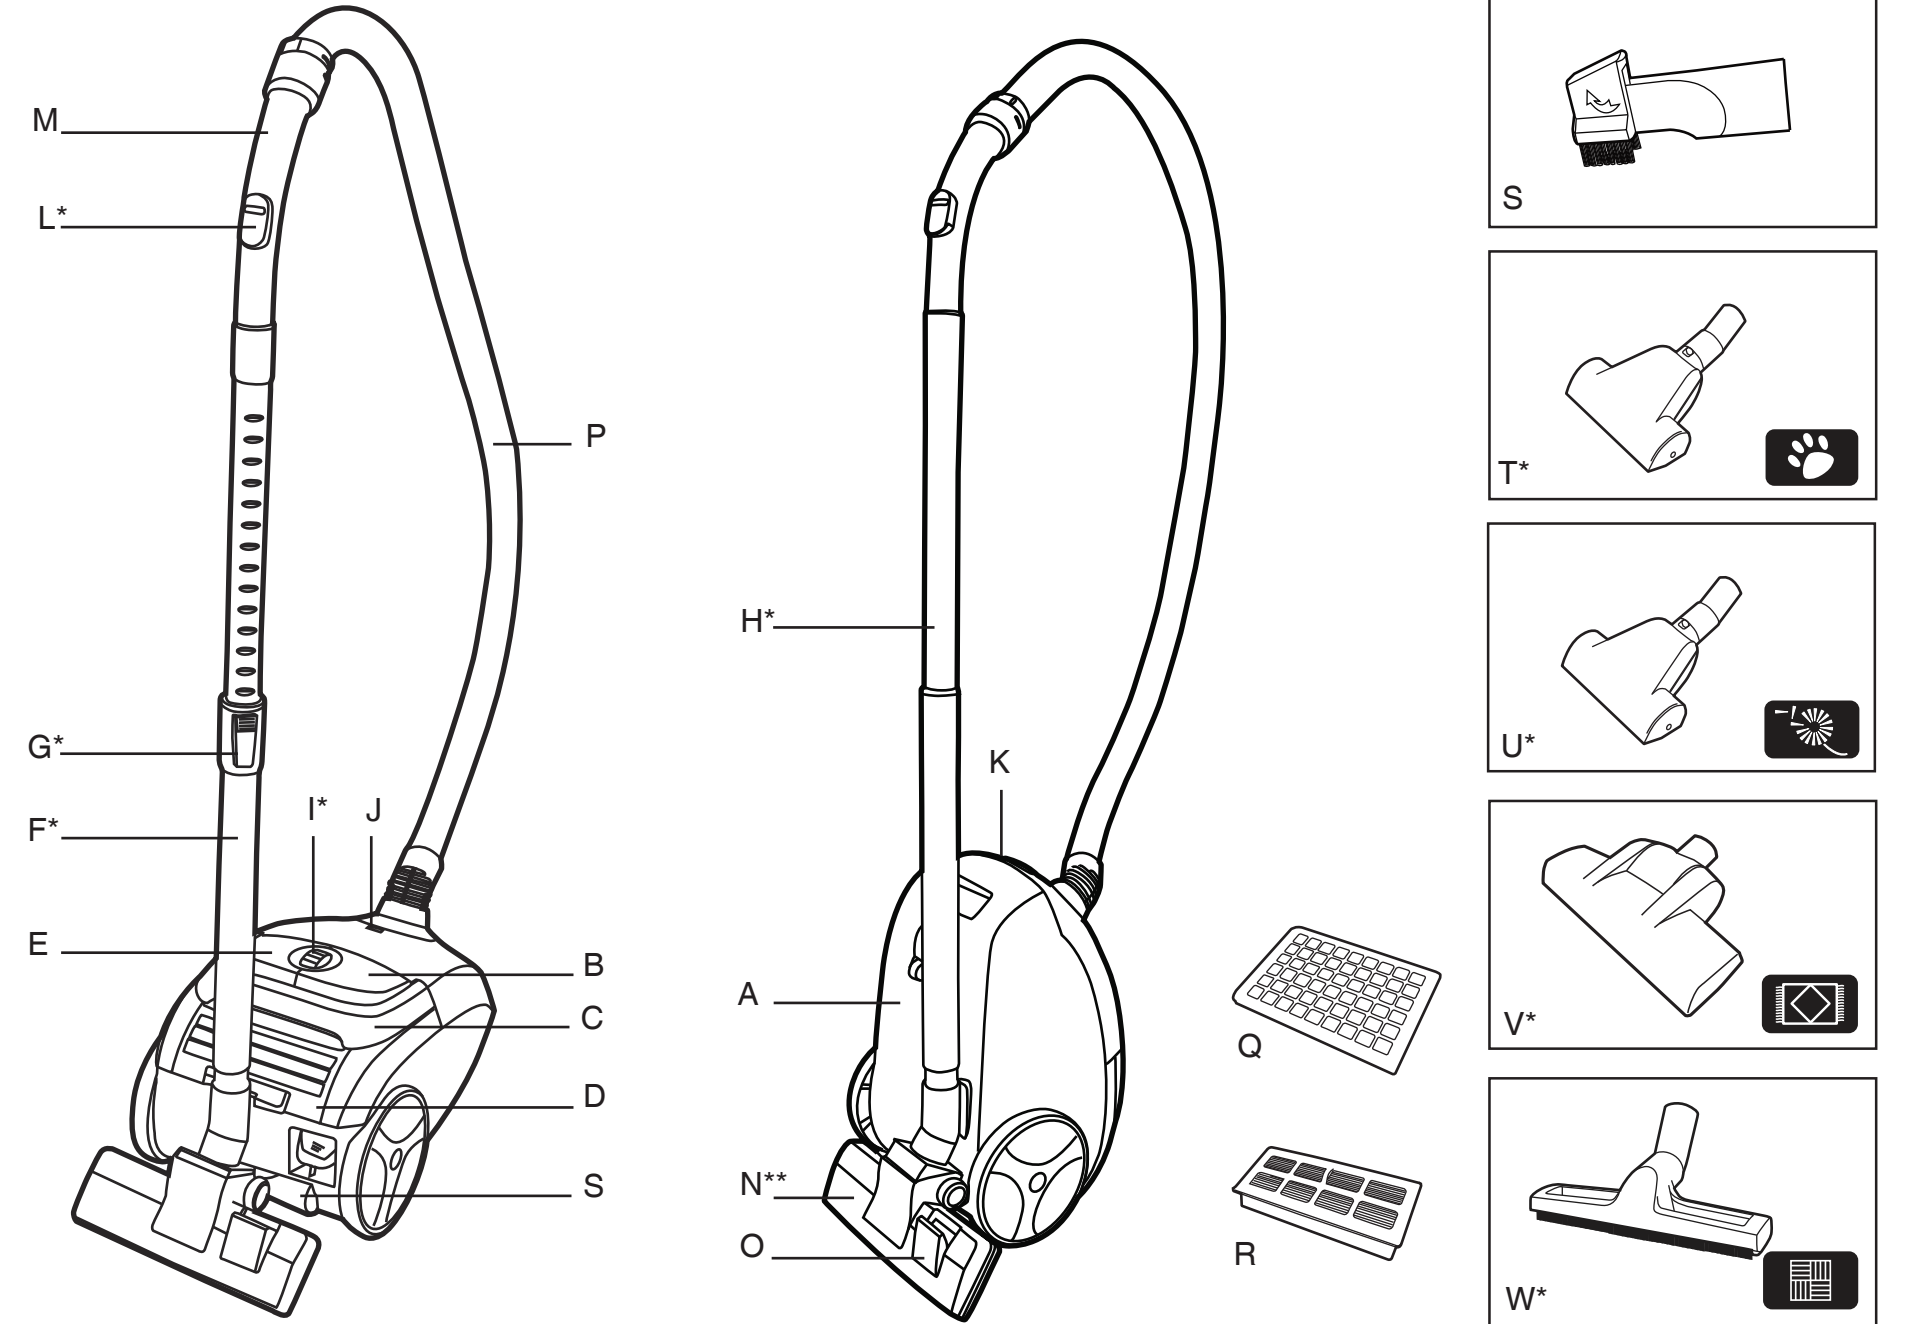

* Certain models only

** Nozzle design may vary according to model

HOOVER

CAPTURE

دليل المالك

























الخبر
تأسست ١٩٦٤
صناعة الثقة



GENERATION FUTURE



GENERATION FUTURE

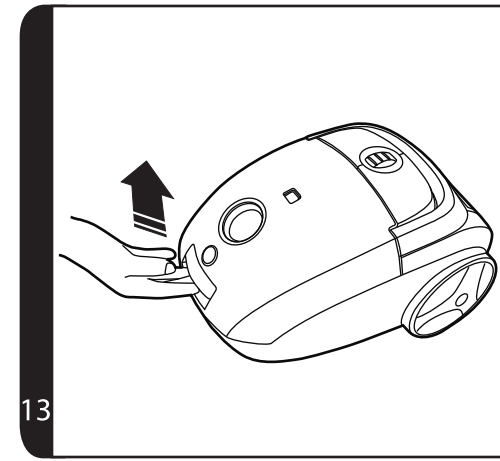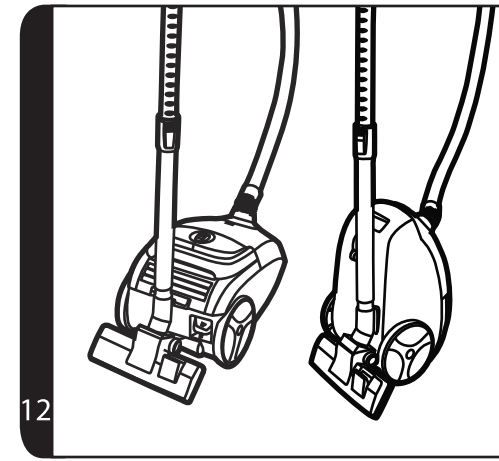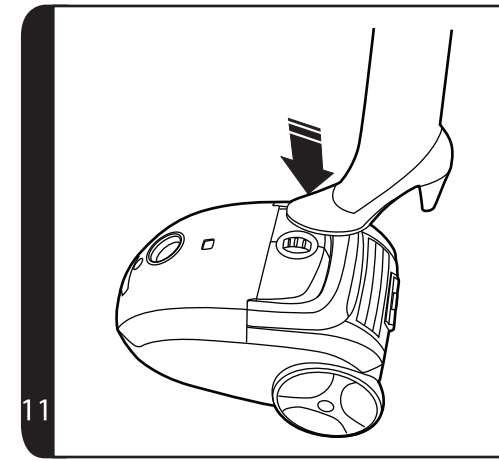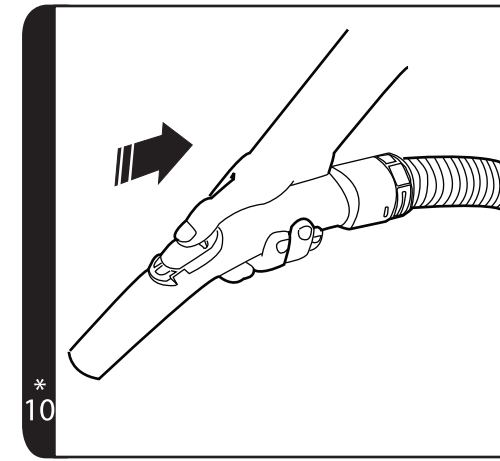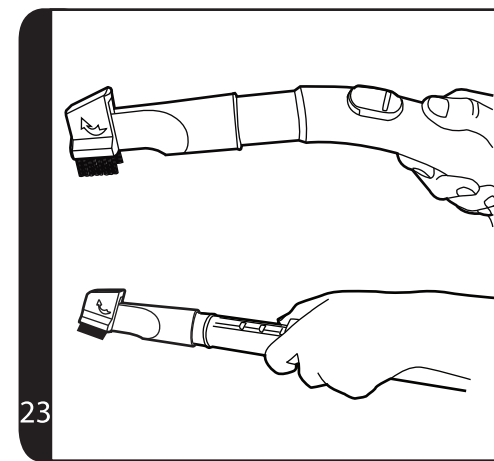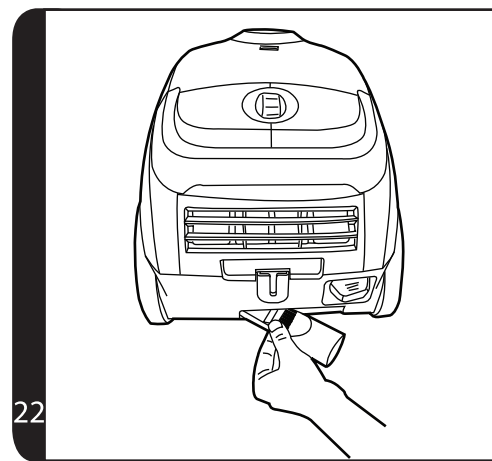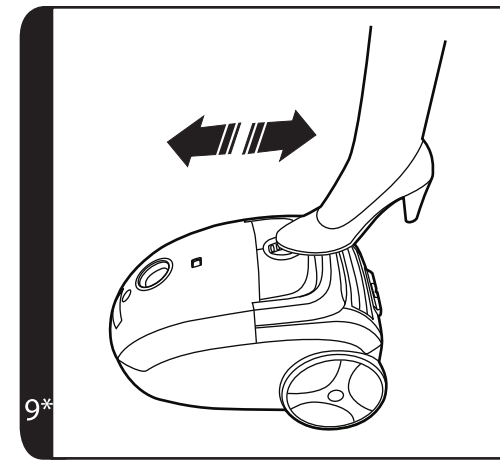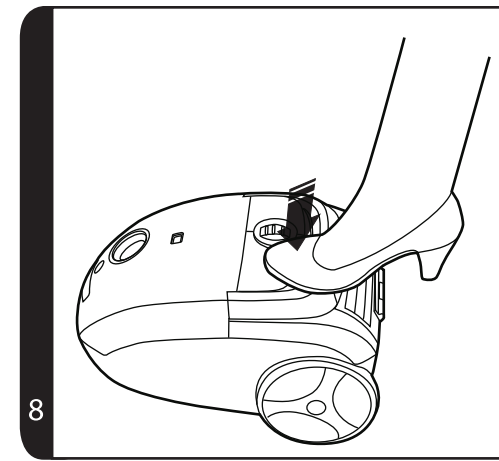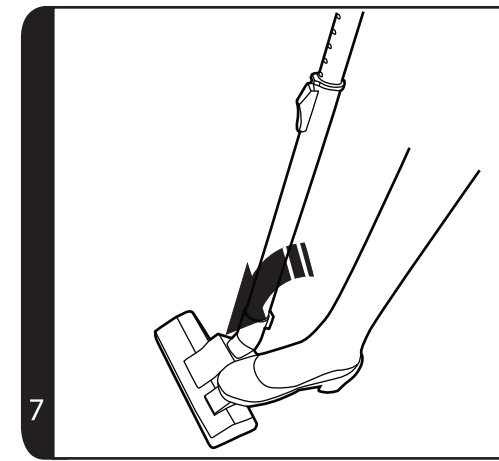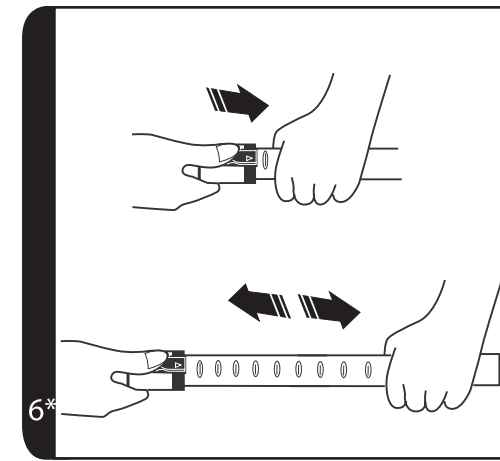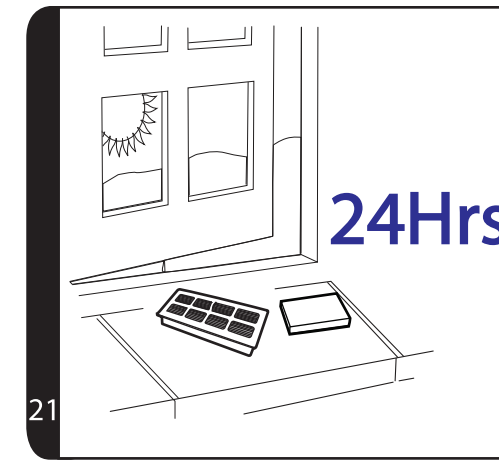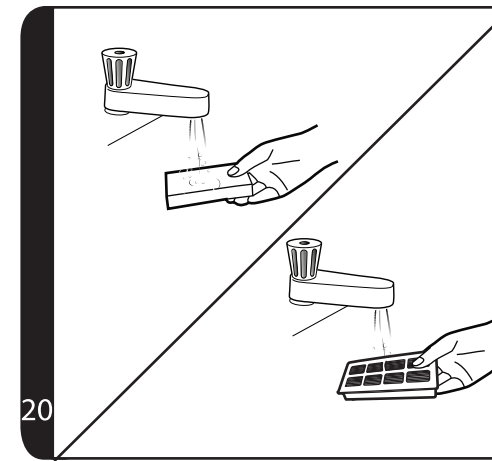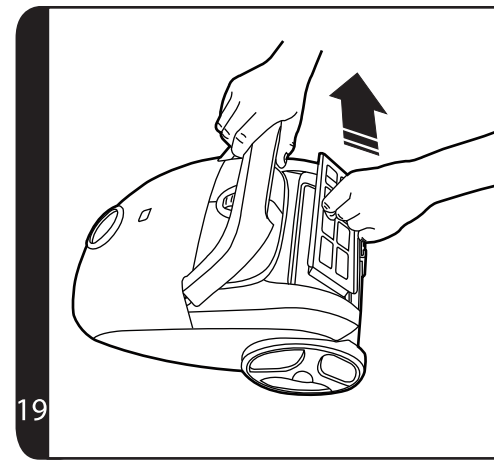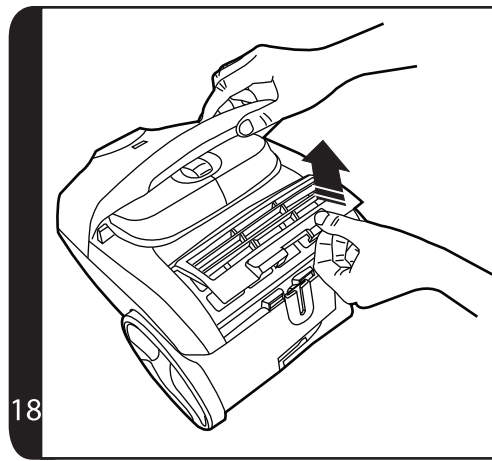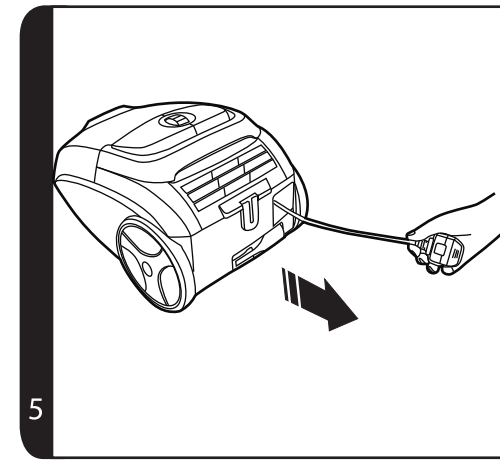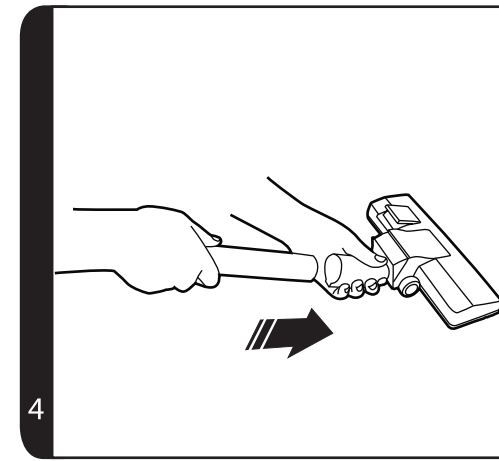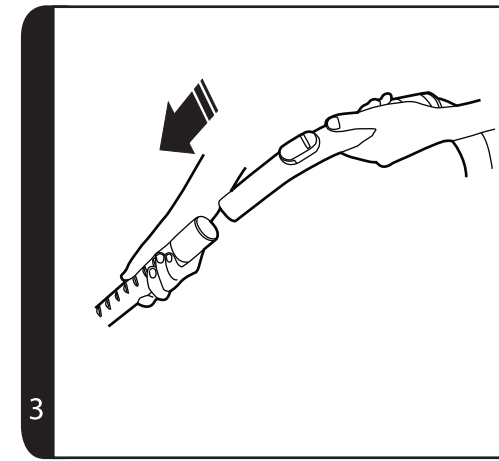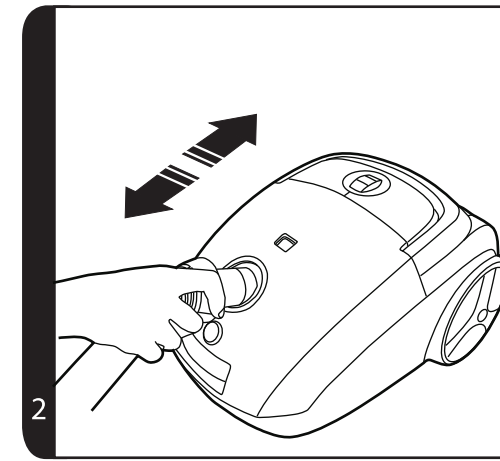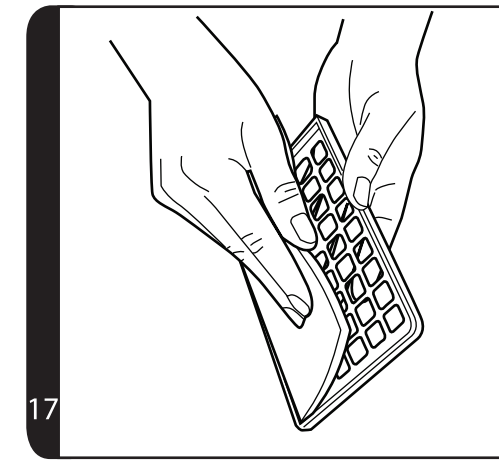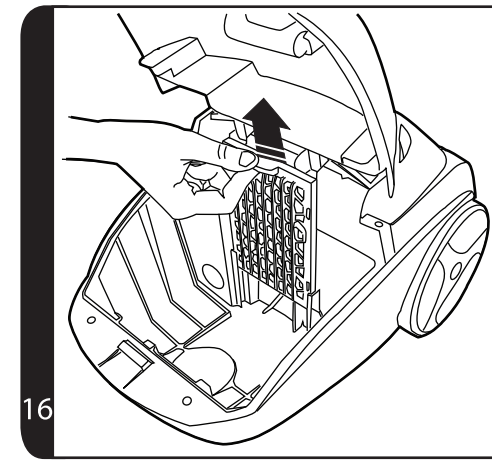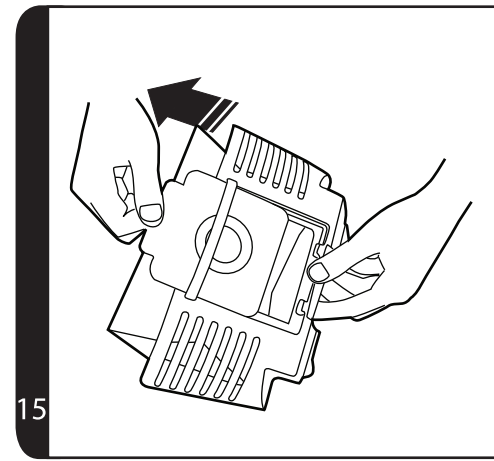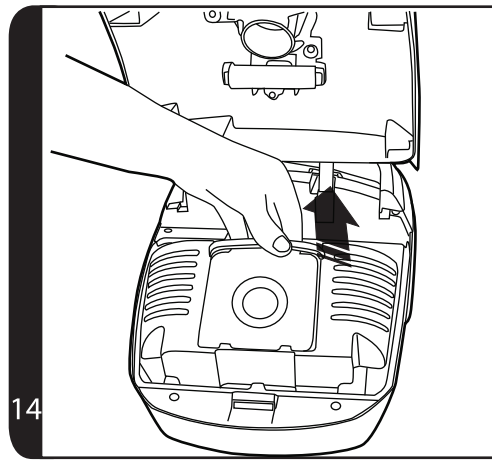

* Certain models only

رسائل تذكير مهمة للسلامة:

هذه المكنسة الكهربائية معدة للاستخدام في أغراض التنظيف المنزلي فقط كما هو وارد في هذا الدليل. يرجى قراءة هذا الدليل جيداً والإلمام بما فيه قبل الشروع في تشغيل الجهاز. لا تستخدم سوى الملحقات الآتية مع الجهاز من شركة Hoover أو المسموح باستخدامها.

تحذير: يمكن أن تحدث الكهرباء خطورة بالغة. هذا الجهاز مزدوج العزل ولا يمكن تأريضه. هذا القابض مزود بمصهر 13 أمبير.

ملاحظة مهمة: أسلاك كبل التيار الرئيسي ملونة وفقاً للكود التالي:

الأزرق - محايد بني - فالح

الكهرباء الساكنة: قد يتسبب بعض السجاد في تراكم شحنات قليلة من الكهرباء الساكنة. علماً بأن تفريغ أي شحنة كهربية ساكنة لا يمثل خطراً على الصحة.

بعد الاستخدام: افصل المكنسة الكهربائية عن مصدر الطاقة وانزع القابض الكهربائي عن مصدر التغذية بالتيار الكهربائي. احرص دوماً على فصل المكنسة عن مصدر التيار الكهربائي ونزع القابض قبل تنظيفها أو القيام بأي أعمال صيانة.

سلامة الأطفال أو كبار السن أو ذوي الاحتياجات الخاصة: لا تسمح للأطفال بالعبث بالجهاز أو مفاتيح التحكم به. يرجى مراقبة الأطفال أو كبار السن أو ذوي الاحتياجات الخاصة عند استخدامهم للجهاز. **خدمات الصيانة المقدمة من HOOVER:** لضمان استمرار تشغيل الجهاز بكفاءة وأمان، ننصحك بأن لا يتم إجراء أية إصلاحات أو صيانة للجهاز إلا من قبل مهندس صيانة معتمد لدى الوكيل المعتمد (شركة العربي للتجارة والصناعة).

احرص على عدم القيام بكل ما يلي:

- وضع المكنسة فوقك عند تنظيف السلالم.
- استخدام المكنسة في الأماكن المفتوحة أو على الأسطح المبللة أو لأغراض التجفيف.
- التقاط أية أجسام صلبة أو حادة أو أعواد الثقاب أو الرماد الساخن أو أعقاب السجائر أو أية أجسام أخرى تشبه ذلك.
- رش أو التقاط مواد قابلة للاشتعال أو سوائل منظفة أو الأيروسولات أو الأبخرة المتصاعدة منها إذ قد يتسبب ذلك في اندلاع الحرائق أو حدوث انفجار.
- الوقوف على كبل الإمداد بالطاقة أثناء استخدام المكنسة الكهربائية أو إزالة القابض بسحب سلك الإمداد بالتيار الكهربائي.
- الوقوف على سلك التيار أو جعله يلتف حول الذراعين أو الأرجل أثناء الاستخدام.
- استخدام المكنسة في أغراض غير مخصصة لها مثل تنظيف الحيوانات أو الأشخاص.
- الاستمرار في استخدام المكنسة حال أن يظهر بها أية أعطال. إذ يتعين عليك التوقف عن استخدام المكنسة على الفور إذا ما تلف سلك الإمداد بالتيار الكهربائي. لذا يتعين استبدال كبل الإمداد بالطاقة عن طريق مهندس صيانة معتمد من الوكيل المعتمد (شركة العربي للتجارة والصناعة) تجنباً لحدوث مخاطر.

التعرف على أجزاء المكنسة

1. جسم المكنسة
2. الدواسة الخاصة بإعادة لف السلك
3. مقبض الحمل
4. غطاء فلتر الشفط
5. دواسة التشغيل/الإيقاف
6. الأنبوب التلسكوبي متداخل الأجزاء*
7. زر تحرير الأنبوب التلسكوبي متداخل الأجزاء*
8. أنبوب مطابق للمواصفات*
9. بكرة التحكم في الطاقة المتغيرة*
10. مؤشر الكشف عن كيس الغبار
11. قفل تحرير غطاء كيس الغبار
12. منظم السحب*
13. المقبض
14. فوهة الشفط الخاصة بتنظيف السجاد والأرضيات**
15. دواسة خديد السطح المراد تنظيفه
16. خرطوم
17. فلتر موتور أولي
18. فلتر الشفط
19. الوصلة 2 في 1
20. فوهة تربو صغيرة لالتقاط شعر الحيوانات الأليفة*
21. فوهة تربو صغيرة لالتقاط مسببات الحساسية*
22. فوهة تربو كبيرة*
- فوهة تنظيف الأرضيات الصلبة*

تركيب أجزاء المكنسة

أخرج كل أجزاء المكنسة من عبوة التغليف.

1. وصل خرطوم المكنسة بالمكنسة بما يضمن تثبيته وإحكام تركيبه في موضعه. لإخراجه: اضغط على الزرين الموجودين بالخرطوم واسحب الخرطوم [2].
2. وصل الطرف العلوي للأنبوب بالمقبض [3].
3. وصل الطرف السفلي للأنبوب بفوهة الشفط الخاصة بتنظيف السجاد والأرضية [4].
- 4.

استخدام المكنسة

1. اخرج سلك التيار وقم بتركيبه في مصدر الإمداد بالطاقة. لا تتجاوز العلامة الحمراء عند سحب السلك [5].
2. اضبط طول الأنبوب التلسكوبي متداخل الأجزاء بتحريك زر تحرير الأنبوب التلسكوبي* لأعلى ثم قم بتحريك المقبض لأعلى أو لأسفل حسب وضع التنظيف الأنسب لك [6].
3. فوهة الشفط الخاصة بتنظيف السجاد والأرضيات. اضغط على الدواسة الموجودة بالفوهة [7] لتحديد وضع التنظيف المناسب لنوعية الأرضية.
4. الأرضيات الصلبة: يتم إنزال الفرشاة لحماية الأرضية.
5. السجاد: يتم رفع الفرشاة للتنظيف التام.
6. شغل المكنسة بالضغط على دواسة التشغيل / الإيقاف الموجود بجسم المكنسة [8]. [8]
7. اضبط مستوى الطاقة بتدوير بكرة التحكم في الطاقة* [9].
8. اضبط منظم السحب* على المستوى المراد [10].

9. أوقف تشغيل المكنسة بعد الاستخدام بالضغط على دواسرة التشغيل / الإيقاف. افصل المكنسة عن مصدر التيار الكهربائي واضغط على دواسرة إعادة لف السلك؛ وذلك لللف السلك مرة أخرى في المكنسة (11).
10. التخزين: يمكن تخزين الأنبوب بصورة مؤقتة أثناء الاستخدام أو حفظه في وضع التخزين حال عدم استخدامه [12].

صيانة المكنسة

استبدال كيس الغبار

إذا أضاء مؤشر الكشف عن كيس الغبار باللون الأحمر. فقم باستبدال الكيس حال لزم الأمر.

1. ارفع قفل تحرير كيس الغبار [13] لفتح الغطاء. ثم اسحب حامل الكيس [14] واسحب طوق كيس جميع الغبار لإخراج الكيس من المكنسة [15].
 2. ضع المصق المانع لدخول الغبار والموجود بطوق كيس جميع الغبار على منفذ الكيس. يجب التخلص من كيس الغبار بالكامل وعلى النحو الصحيح.
 3. قم بطي كيس جديد كما هو موضح على الكيس وقم بتركيبه بإدخال طوق كيس التجميع إلى حامل الكيس.
 4. أعد تركيب حامل الكيس وأغلق الغطاء.
- تنبيه - لن يتم إغلاق الغطاء حال عدم وجود كيس جميع الغبار والفيلتر أو أي منهما بالمكنسة. لذا يرجى التأكد من وجود الكيس والحامل عند إغلاق الغطاء.
- تذكر: قد يضيء مؤشر الكشف عن كيس الغبار باللون الأحمر حال وجود أية عوائق. في هذه الحالة يرجى الرجوع إلى قسم "إزالة العوائق من الجهاز".

تنظيف الفلتر

للحصول على الأداء الأمثل من المكنسة. يرجى غسل فلتر HEPA الأولي كل 5 مرات يتم تغيير الكيس فيها.

تنظيف الفلتر الأولي:

1. ارفع قفل تحرير كيس الغبار [13] لفتح الغطاء. ثم أخرج حامل الكيس.
2. لإخراج الفلتر الأولي. اسحب إطار الفلتر الأولي من المكنسة [16].
3. افصل الفلتر عن الحامل [17].
4. اغسله بماء دافئ [20] واتركه ليجف بالكامل قبل وضعه داخل المكنسة [21].

تنظيف فلتر الشفط:

1. لإزالة فلتر الشفط: قم أولاً بفك غطاء الفلتر [18] ثم أخرج كيس الفلتر [19]. [19]
 2. اغسل الفلتر بماء دافئ [20] ثم اتركه ليجف بالكامل قبل وضعه داخل المكنسة [21]. [21].
- تذكر: لا تستخدم الماء الساخن أو المنظفات. وفي حال تلف الفلتر. قم باستبداله بفلتر Hoover الأصلي. لا تحاول استخدام المكنسة دون تركيب كيس الغبار أو الفلتر.

تنظيف كيس الغبار القماش المثبت بالمكنسة:

للحفاظ على الأداء الأمثل ننصحك بغسل كيس الغبار القماش المثبت بالمكنسة بماء دافئ كل 5 مرات يمتلئ فيها الكيس عن آخره. أزل المياه الزائدة واتركه ليجف تمامًا قبل إعادة تركيبه.

إزالة العوائق من الجهاز

حال وميض أو إضاءة مؤشر الكشف عن كيس الغبار:

1. تأكد هل الكيس يمتلئ عن آخره. وإذا كان كذلك يرجى الرجوع إلى "استبدال كيس الغبار".
2. إذا لم يكن الكيس ممتلئًا إحدًا
 - هل يحتاج الفلتر للتنظيف؟ إذا كان كذلك يرجى الرجوع إلى قسم "تنظيف الفلتر".
 - تأكد من عدم وجود أية عوائق في الجهاز - استخدم عود رفيع أو عصا طويلة لإزالة أية عوائق من الأنبوب أو الخرطوم المرن.

تنبيه - سيومض مؤشر الكشف عن كيس الغبار باللون الأحمر أثناء استخدام المكنسة عندما يكون ممتلئًا عن آخره أو حال وجود عائق به أو إذا كان الفلتر غير نظيف. إذا استخدمت المكنسة الكهربائية لفترة من الوقت حال إضاءة مؤشر الكشف عن كيس الغبار باللون الأحمر. يحدث انقطاع للتيار الكهربائي مما يعمل على إيقاف تشغيل المكنسة الكهربائية تفادياً لارتفاع درجة الحرارة. ويومض مؤشر الكشف عن كيس الغبار باللون الأخضر بمجرد أن تتوقف المكنسة عن التشغيل للإشارة إلى أنه قد تم تنشيط وظيفة قطع التيار. حال حدوث ذلك. قم بإيقاف تشغيل المكنسة وافصلها عن مصدر التيار وقم بتصحيح الخطأ. سيستغرق الأمر حوالي 30 دقيقة لإعادة ضبط فاصل التيار تلقائيًا.

الملحقات والوضومات

يمكن تركيب كل الملحقات في طرف المقبض أو الأنبوب. [23]

الوصلة 2 في 1 - جمع بين وظيفتين إذ إنه يمكن توصيلها لتستخدم كوصلة لتنظيف الشقوق. وتستخدم كفرشاة لتنظيف الغبار وذلك عن طريق تدوير الطرف النهائي لها. يمكن تخزين الوصلة 2 في 1 بالجزء الخلفي للمكنسة. [22]

وصلة تنظيف الشقوق - تستخدم لتنظيف الأركان والمناطق التي يصعب الوصول إليها. فرشاة تنظيف الغبار - لأرفف الكتب والإطارات ولوحات المفاتيح وغيرها من المناطق ذات الأسطح الناعمة. لإنزال الفرشاة اضغط على الزر الموجود بالوصلة.

فوهة تربو الصغيرة لالتقاط شعر الحيوانات الأليفة* - تستخدم فوهة تربو الصغيرة لتنظيف السلالم أو التنظيف التام لأسطح النسيج والمناطق الأخرى التي يصعب تنظيفها (1 ر).

فوهة تربو الصغيرة لالتقاط مسببات الحساسية* - تستخدم فوهة تربو الصغيرة لتنظيف السلالم أو التنظيف التام لأسطح النسيج والمناطق الأخرى التي يصعب تنظيفها. [1 ش]

فوهة تربو الكبيرة* - تستخدم فوهة تربو الكبيرة للتنظيف التام للسجاد. [1 ت]

فوهة تنظيف الأرضيات الصلبة* - تستخدم لتنظيف الأرضيات الخشبية والأرضيات الأخرى ذات الأسطح الناعمة. [1 ث]

ملاحظة مهمة: لا تستخدم فوهة تربو الكبيرة أو الصغيرة على السجاد الذي يحتوي على شراريب طويلة وجلود الحيوانات وزغب السجاد الذي يزيد عمقه عن 15 مم. لا تجعل الفوهة ثابتة أثناء تدوير الفرشاة.

قائمة فحص المستخدم

- إذا واجهتك مشكلة عند استخدام هذا المنتج، استكمل قائمة التحقق البسيطة هذه الخاصة بالمستخدم قبل الاتصال بالخدمة المحلية من خلال الوكيل المعتمد (شركة العربي للتجارة والصناعة).
- هل يوجد مصدر إمداد بالكهرباء للمكنسة؟ يرجى التحقق من ذلك مع جهاز كهربائي آخر.
 - هل كيس الغبار ممتلئ عن آخره؟ يرجى الرجوع إلى "صيانة المكنسة الكهربائية".
 - هل الفلتر مسدود؟ يرجى الرجوع إلى "تنظيف الفلتر".
 - هل الخرطوم أو الفوهة مسدودة؟ يرجى الرجوع إلى "إزالة العوائق من الجهاز".
 - هل زادت درجة حرارة المكنسة بصورة مفرطة؟ إذا حدث ذلك، فسيستغرق الأمر حوالي 30 دقيقة ليتم إعادة ضبطها تلقائيًا.

معلومات مهمة

قطع الغيار والمواد المستهلكة من Hoover

احرص دائمًا على استبدال قطع الغيار بقطع غيار Hoover الأصلية، والتي يمكنك الحصول عليها من خلال الوكيل المعتمد (شركة العربي للتجارة والصناعة) مباشرة، ويرجى تحديد رقم الطراز الخاص بك عند طلب قطع الغيار.

المواد المستهلكة:

- كيس ورقي:
- كيس HEPA:
- مجموعة الفلتر (فلتر الموتور الأولي وفلتر الشفط):

قطع الغيار:

- فوهة الشفط الخاصة بتنظيف السجاد والأرضيات:
- فوهة لتنظيف أرضيات الباركيه:
- فوهة تربو الكبيرة:
- فوهة تربو الصغيرة لالتقاط شعر الحيوانات الأليفة:
- خرطوم مرن كامل:

خدمات الصيانة المقدمة من HOOVER

إذا احتجت إلى الصيانة في أي وقت، يرجى الاتصال بمكتب الصيانة المحلي الخاص بالوكيل المعتمد (شركة العربي للتجارة والصناعة).

الجودة

BSI ISO 9001

تم إجراء تقييم مستقل لمصانع شركة Hoover لمعرفة مدى مطابقتها لمعايير الجودة، يتم تصنيع منتجاتنا باستخدام أنظمة الجودة التي تفي بمتطلبات شهادة الأيزو 9001.

البيئة:

هذا الجهاز مسجل وفقًا للتوجيه الصادر عن الاتحاد الأوروبي Ec/2002/96 بشأن نفايات المعدات الكهربائية والإلكترونية (WEEE).

بتخلصك السليم من المنتج فإنك تساعد على منع أي آثار سلبية محتملة قد تضر بالبيئة والصحة الإنسانية عمومًا، والذي قد ينشأ نتيجة التعامل غير السليم مع نفايات هذا المنتج.

يشير الرمز الموجود على المنتج إلى أنه لا يجوز التعامل مع المنتج كمخلفات منزلية، وبدلاً من ذلك يجب تسليمه لنقطة جميع مخصصة لإعادة تدوير الأجهزة الكهربائية والإلكترونية.

وينبغي أن تتم عملية التخلص من المنتج طبقًا للوائح البيئية المحلية للتخلص من النفايات.

الضمان

يحدد شروط الضمان الخاص بهذا الجهاز مثلنا في الدولة التي يباع فيها المنتج، ويمكنك الحصول على تفاصيل هذه الشروط من البائع الذي اشترت منه المنتج. لذا يتعين تقديم فاتورة البيع أو الإيصال عند إجراء أي مطالبة بموجب أحكام هذا الضمان.

يخضع هذا الضمان للتغيير دون إخطار.

IMPORTANT SAFETY REMINDERS

This cleaner should only be used for domestic cleaning, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance. Use only attachments recommended or supplied by Hoover.

WARNING: Electricity can be extremely dangerous. This appliance is double insulated and must not be earthed. This plug is fitted with a 13 amp fuse (UK only).

IMPORTANT: The wires in the mains power lead are coloured in accordance with the following code: **Blue – Neutral** **Brown – Live**

STATIC ELECTRICITY: Some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.

AFTER USE: Switch the cleaner off and remove the plug from the electricity supply. Always switch off and remove the plug before cleaning the appliance or attempting any maintenance task.

HOOVER SERVICE: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Hoover service engineer.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

IT IS IMPORTANT THAT YOU DO NOT:

- Position the cleaner above you when cleaning the stairs.
- Use your cleaner out of doors or on any wet surface or for wet pick up.
- Pick up hard or sharp objects, matches, hot ashes, cigarette ends or other similar items.
- Spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours as this may cause risk of fire / explosion.
- Run over the power cord when using your cleaner or remove the plug by pulling on the power cord.
- Stand on or wrap the power cord around arms or legs when using the cleaner.
- Use the appliance to clean people or animals.
- Continue to use your cleaner if it appears to be faulty. If the power cord is damaged stop using the cleaner IMMEDIATELY. To avoid a safety hazard, an authorised Hoover service engineer must replace the power cord.

*Certain models only

**Nozzle design may vary according to model

GETTING TO KNOW YOUR CLEANER

- | | |
|------------------------------------|--|
| A. Main Cleaner | L. Suction Regulator* |
| B. Cord Rewind Pedal | M. Handle |
| C. Carry Handle | N. Carpet and Floor Nozzle** |
| D. Exhaust Filter Cover | O. Surface selector Pedal |
| E. On/Off Pedal | P. Hose |
| F. Telescopic Tube* | Q. Pre motor filter |
| G. Telescopic Tube Release Button* | R. Exhaust filter |
| H. Standard Tube* | S. 2 in 1 Tool |
| I. Variable Power Control Roller* | T. Pet Hair Remover Mini Turbo Nozzle* |
| J. Bag Check Indicator | U. Allergen Remover Mini Turbo Nozzle* |
| K. Bag Door Release Latch | V. Grand Turbo Nozzle* |
| | W. Hard Floor Caresse Nozzle* |

ASSEMBLING YOUR CLEANER

Remove all components from the packaging.

1. Connect the hose to the cleaner main body, ensuring it clips and locks into position. To release: simply press the two buttons on the hose end and pull [2].
2. Connect the tube upper end to the handle. [3].
3. Connect the tube lower end to the carpet and floor nozzle [4].

USING YOUR CLEANER

1. Extract power cord and plug it into the power supply. Do not pull the cord beyond the red marker [5].
2. Adjust the length of the telescopic tube* by moving the telescopic release button* up and raise or lower the handle to the most comfortable cleaning position [6].
3. Carpet & Floor Nozzle. Press the pedal on the nozzle [7] to select the ideal cleaning mode for the floor type.
 - Hard Floor:** The brushes are lowered to protect the floor
 - Carpet:** With lifted brushes for the deepest clean
4. Switch the cleaner on by pressing the On/Off pedal on the cleaner main body [8]
5. Adjust the power level by rotating the variable power control roller*. [9]
6. Adjust the suction regulator* to the desired level. [10].
7. Switch off at the end of use by pressing the On/Off pedal. Unplug and press the cord rewind pedal to wind the power cord back into the cleaner [11].
8. Parking and Storage - The tube can be parked for temporary storage while in use, or in the storage position when not in use [12].

CLEANER MAINTENANCE

Replacing The Dust Bag

If the bag check indicator is red please check and, if necessary, replace the bag.

1. Lift the bag door release latch [13] to open the cover, pull the bag holder [14] and pull the bag collar to remove the bag [15].
2. Apply the peel and seal sticker, located on the bag collar, to the bag inlet. The full dust bag should be disposed of correctly and carefully.
3. Fold a new bag as shown on the bag and fit by inserting the collar into the bag holder.
4. Refit the bag holder and close the bag door.

Warning - The bag door will NOT close if the dust bag and/or the bag holder are not assembled to the cleaner. Always ensure the bag and bag holder are present when closing the bag door.

Remember: The bag check indicator may also be red if an obstruction has occurred. In this case refer to 'Removing A Blockage From the System'.

Cleaning the Filters

To maintain optimum performance of your cleaner, please wash the filters after each 5 bag changes.

Cleaning the pre-motor filter:

1. Lift the bag door release latch [13] to open the cover and remove the bag holder.
2. To remove the pre-motor filter slide the pre-motor filter frame from the cleaner. [16]
3. Remove the filter from the holder. [17]
4. Wash it in hand warm water, [20] and allow it to dry thoroughly before replacing to the cleaner [21].

Cleaning the exhaust filter:

1. To remove the exhaust filter, unclip the exhaust filter cover [18] and remove the filter pack. [19]
2. Wash the filter in hand warm water [20] and allow it to dry thoroughly before replacing to the cleaner. [21].

Remember: Do not use hot water or detergents. In the unlikely event of the filters becoming damaged, fit a Genuine Hoover replacement. Do not try and use the product without a dust bag or filter fitted.

Cleaning the permanent cloth dust bag*

To maintain optimum performance we recommend that you wash the permanent cloth dust bag under hand warm water after every 5 full bags. Remove excess water and leave to dry fully before replacing.

*Certain models only

Removing a Blockage From The System

If the bag check indicator is illuminated or flashing:

1. Check if the bag is full. If so refer to 'Replacing The Dust Bag'.
2. If it is not full, then;
 - A. Do the filters need cleaning? If so refer to 'Cleaning the Filter'.
 - B. Check if there is any other blockage in the system - Use a rod or a pole to remove any blockage from the Teletube or flexible hose.

Warning - The bag check indicator will turn red if the cleaner is used when full, if there is a blockage or if the filters are dirty. If the cleaner is used for a significant period of time with the bag check indicator is red, a thermal cut out will switch the cleaner off to prevent overheating. The bag check indicator turn green once the cleaner has switched off to signal that the thermal cut out has been activated. If this should happen, switch the cleaner off, unplug and correct the fault. It will take about 30 minutes for the cut out to automatically reset.

ACCESSORIES AND NOZZLES

All accessories can be fitted to the end of the handle or the end of the tube. [23]

2 in 1 tool – Combines two functions in one, the 2 in 1 tool can be connected as a crevice tool. By rotating the end piece converts to a dusting brush. The 2 in 1 tool can be stored neatly at the rear of the cleaner. [22]

Crevice Tool – For corners and hard to reach areas.

Dusting Brush – For bookshelves, frames, keyboards and other delicate areas. To extend the brushes push the button on the body of the tool.

Pet Hair Remover Mini Turbo Nozzle* – Use the mini turbo nozzle on stairs or for deep cleaning on textile surfaces and other hard to clean areas [1T].

Allergen Remover Mini Turbo Nozzle* – Use the mini turbo nozzle on stairs or for deep cleaning on textile surfaces and other hard to clean areas. [1U]

Grand Turbo Nozzle* – Use the turbo nozzle for deep cleaning on carpets. [1V]

Hard Floor Caresse Nozzle* – For wooden floors and other delicate floors. [1W]

IMPORTANT: Do not use the grand turbo nozzle or mini turbo nozzles on rugs with long fringes, animal hides and carpet pile deeper than 15mm. Do not keep the nozzle stationary while the brush is rotating.

USER CHECKLIST

Should you have a problem with the product, complete this simple user checklist before calling your local Hoover service.

- Is there a working electricity supply to the cleaner? Please check with another electrical appliance
- Is the dust bag over-filled? Please refer to 'Cleaner Maintenance'
- Is the Filter blocked? Please refer to 'Cleaning the filter'
- Is the hose or nozzle blocked? Please refer to 'Removing a blockage from the system'
- Has the cleaner overheated? If so, it will take approximately 30 minutes to automatically reset

IMPORTANT INFORMATION

Hoover spares and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

Consumables:

- | | |
|---------------------------------------|---------------|
| • PAPER BAG: | H64, 35600637 |
| • HEPA BAG: | H63, 35600536 |
| • FILTER KIT (pre-motor and exhaust): | U63, 35601193 |

Spares:

- | | |
|-------------------------------|-------------------|
| • CARPET & FLOOR NOZZLE: | G130, 35601195 |
| • PARQUET CARESSE NOZZLE: | G131 PC, 35601196 |
| • GRAND TURBO NOZZLE: | J54, 35601197 |
| • PET HAIR MINI TURBO NOZZLE: | J46, 35601116 |
| • COMPLETE FLEXIBLE HOSE: | D128, 35601194 |

Hoover Service

Should you require service at any time, please contact your local Hoover Service Office.

Quality

BSI ISO 9001

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001.

The Environment:

This appliance is marked according to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the appliance collection point for recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with the local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Your Guarantee

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.