

TORNADO



موديل

TVBL-1000LI

شكراً لإختيارك خلاط بتقنية تفريغ الهواء - تورنبندو

هذه العلامة تورنبندو هي علامة تجارية مسجلة خاصة بشركة العربى

دليل التشغيل
خلاط بتقنية تفريغ الهواء

ELARABY




19319

www.elarabygroup.com

Tornado

تعليمات الأمان

١. إن الجهاز مصمم لتحضير مكونات متوافقة ومخصص للاستخدام المنزلي فقط.
٢. قبل توصيل الجهاز بالمقبس، تحقق من تطابق فولتية مصدر التيار الكهربائي والفولتية المحددة بلوحة التصنيف بالجهاز.
٣. لا تدع أيًا من وحدة المحرك، أو السلك أو القابس يبتل.
٤. لا تستخدم المنتج بصورة خاطئة. قد يتسبب سوء الاستخدام في حدوث أضرار.
٥. افصل الجهاز دائمًا من مصدر الكهرباء إذا ترك دون رقابة وقبل التركيب، أو الفك أو التنظيف.
٦. في حالة تلف السلك الرئيسي، فيجب أن تستبدله الشركة المصنعة، أو مركز خدمة العملاء أو شخص مختص لتفادي المخاطر.
٧. تستمر المرفقات في الدوران بعد إيقاف التشغيل. انتظر حتي تتوقف المرفقات تمامًا قبل حمل الجهاز.
٨. لا تدع السلك يتدلى من حافة طاولة أو منضدة وألا يلمس سطح ساخن.
٩. التشغيل قصير الأجل. لا تستخدم الجهاز لأكثر من دقيقتين في كل مرة. سيتوقف الجهاز تلقائيًا عن العمل بعد دقيقتين من العمل المتواصل!
١٠. قم بإيقاف تشغيل الجهاز وافصله من مصدر الكهرباء قبل تغيير المرفقات أو قبل الاقتراب من الأجزاء المتحركة أثناء الاستخدام.
١١. يمكن للأشخاص الذين يعانون من قدرات بدنية، أو حسية، أو ذهنية منخفضة أو من تنقصهم الخبرة والمعرفة استخدام هذا الجهاز إذا كانوا تحت إشراف أو إذا حصلوا على تعليمات بشأن استخدام الجهاز بطريقة آمنة وإذا أدركوا المخاطر التي ينطوي عليها استخدام الجهاز.
١٢. يجب ألا يعبث الأطفال بالجهاز.
١٣. لا يمكن للأطفال استخدام هذا الجهاز. احتفظ بالجهاز وبالسلك الخاص به بعيدًا عن متناول الأطفال.
١٤. كن حذرًا في حالة سكب السائل الساخن في معالج الطعام حيث يمكن أن يُطرد من الجهاز بسبب التبخر المفاجيء.
١٥. إن هذا الجهاز معد للاستخدام المنزلي والاستخدامات المماثلة مثل:
 - طاقم الطهارة في المحلات التجارية، والمكاتب وغيرها من بيئات العمل؛
 - في بيئات العمل الزراعية؛
 - يستخدمها العملاء في الفنادق، والموتيلات وغيرها من أمثلة البيئات السكنية؛
 - البيئات مثل فنادق المبيت والإفطار.
١٦. تستخدم السكن العريض لإخراج الطعام من الوعاء فقط. لا تستخدمها عندما تكون الشفرات قيد الشغل.
١٧. لتجنب ارتداد الطعام وحماية خاصية التفريغ بالجهاز، لا تقم بتفريغ الطعام بعد خفقه. نوصي بألا تكون أقصى كمية لتفريغ الطعام أكثر من ١٠٠٠ مل.
١٨. لا تضع الماء الساخن أو الطعام الذي تزيد درجة حرارته عن ٤٠ درجة مئوية في وعاء التفريغ.
١٩. تنبيه: لتجنب الخطر الناجم عن إعادة ضبط الفصل الحراري غير المقصود، يجب ألا يتم تزويد هذا الجهاز بجهاز تبديل خارجي، مثل مؤقت، وألا يتم توصيله بدائرة يتم تشغيلها وإيقافها على نحو منتظم من قبل مرفق الخدمات.



إرشادات المنتج

TVBL-1000LI هو خلاط بتقنية تفريغ الهواء سريع الدوران يختلف كثيرًا عن الخلاطات الأخرى المتوفرة.

مواصفات المنتج


١. لا يحتاج إلى دليل وسهل الاستخدام.
٢. خاصية بساطة التصميم للتهوية.
٣. كوب كبير للمزج خالي من البيسفينول أ (BPA).
٤. سهل التنظيف.
٥. خاصية التفريغ: تساعد الطعام على تقليل الأكسدة والحفاظ على المواد الغذائية والجودة.
٦. مناسب لصنع عصير الفواكه، والسموزي، الميكس شيك، والصلصة الخ.

إرشادات المنتج

رقم الموديل: TVLB-1000LI

٢٢٠-٢٤٠ فولت ~ ٦٠/٥٠ هرتز ١٠٠٠ وات

القطع

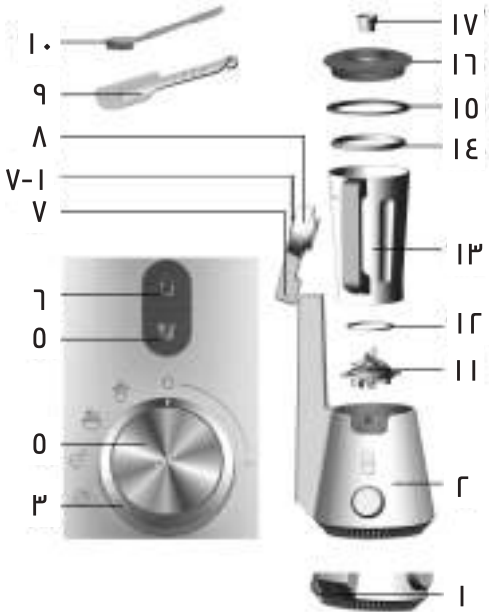

١. مفتاح "On/Off".
٢. الجهاز الرئيسي
٣. المقبض
٤. زر "البدء/التوقف"
٥. زر "الخفق (P)"
٦. زر "التفريغ"
٧. ضوء المؤشر
- ٨-٧ صمام التهوية
٨. غطاء التفريغ
٩. الملعقة
١٠. فرشاة
١١. مقعد الشفرة
١٢. حلقة مانعة للتسرب ١
١٣. كوب المزج (١,٥ لتر حد أقصى)
١٤. حلقة مانعة للتسرب ٢
١٥. حلقة مانعة للتسرب ٣
١٦. الغطاء
١٧. الغطاء المركزي (مزود بغطاء محكم لين)

مقدمة عن وضع التشغيل

وضع "الاستعداد"

قم بتوصيل الجهاز بالكهرباء ثم قم بتشغيل الجهاز، حيث يدخل الجهاز في وضع "الاستعداد":
١. تظل أضواء مؤشر زر "الخفق (P)" وزر "التفريغ" مضاءة.
٢. يعمل ضوء الإنذار لزر "البدء / الإيقاف".

إرشادات: إذا لم تقوم بأي عملية باستخدام الجهاز خلال ٣ دقائق أثناء تشغيل وضع "الاستعداد"، ستنتفيج كافة المؤشرات. ثم ينتقل الجهاز تلقائيًا إلى "وضع السكون".

يمكنك استخدام إحدى الطرق التالية للخروج من "وضع السكون":

١. اضغط على زر "البدء / التوقف".
٢. أدر المقبض (٣) مرة أخرى إلى الوضع "0".
٣. انزع غطاء التفريغ ثم أعد تركيبه.

مقدمة عن الأزرار

مفتاح التشغيل / إيقاف التشغيل "On/Off" (١)

قم بتدريك المفتاح لتشغيل الطاقة بالجهاز ON أو لإيقاف تشغيل الجهاز OFF.

المقبض (٣)

١. قم بلف المقبض من "0" إلى الوضع "+": حدد السرعة (١ إلى ٥) واطرك الجهاز يقوم بالمزج.

إرشادات:

- ١) لا يمكن استخدام الزر "Vacuum" والزر "Pulse (P)" أثناء تشغيل هذا الوضع!
- ٢) إذا كان الجهاز يعمل بين "0" و "+"، فإن أقصى مدة للعمل هي دقيقتان! سيتوقف الجهاز عن العمل بعد دقيقتين.
٢. لف المقبض إلى الوضع "0": اترك الجهاز ليتوقف عن العمل، أو اترك الجهاز يرجع إلى وضع "الاستعداد".
٣. "Smoothie" : يمكنك استخدام هذه الخاصية لصنع سموزي الفواكه اللذيذ.
- لف المقبض (٣) إلى الوضع "Smoothie"  في "وضع الاستعداد"، ثم اضغط على الزر "Start/stop".
- سيقوم الجهاز تلقائيًا بتفريغ كوب المزج من الهواء أولاً ثم خلط الطعام وفقًا للإعداد الافتراضي. وعند انتهاء الوقت، يتوقف الجهاز عن العمل، ثم تسمع صوت "صغير".

إرشادات:

- ١) لا يمكن استخدام الزر "Vacuum" والزر "Pulse (P)" أثناء تشغيل هذا الوضع!
- ٢) يظل ضوء المؤشر (٧) يومض أثناء عملية التفريغ. بعد انتهاء عملية التفريغ، يبقى ضوء المؤشر (٧) مضاءً.

ملاحظات: الجدول الزمني للتفريغ كما يلي حيث يمكنك الرجوع إليه عند الحاجة.

الرقم	سعة للطعام	الوقت اللازم
١	كوب فارغ	٥٠ ثانية
٢	١,٥ لتر طعام سائل	٢٠ ثانية

مقدمة عن الأزرار

١. “Nutri blending”

لف المقبض (٣) إلى الوضع “Nutri blending” أثناء تشغيل “وضع الاستعداد”، ثم اضغط على الزر “Start/stop”. سيقوم الجهاز تلقائيًا بتفريغ كوب المزج أولًا ثم خلط الطعام وفقًا للإعداد الافتراضي. وعند انتهاء الوقت، يتوقف الجهاز عن العمل، ثم تسمع صوت “صغير”.

إرشادات:

(١) لا يمكن استخدام الزر “Vacuum” والزر “P esluP” أثناء تشغيل هذا الوضع!
(٢) يظل ضوء المؤشر (٧) يومض أثناء عملية التفريغ. بعد انتهاء عملية التفريغ، يبقى ضوء المؤشر (٧) مضاءً.

ملحوظة: إن وقت عملية التفريغ مثل الوقت في “Smoothie”.

٢. “Ice crushing”

يمكنك استخدام هذه الخاصية لسحق الثلج إلى قطع صغيرة. لفة المقبض (٣) إلى الوضع “Ice crushing” أثناء تشغيل “وضع الاستعداد”، ثم اضغط على الزر “Start/stop”. سيقوم الجهاز تلقائيًا بمزج الطعام وفقًا للإعداد الافتراضي. وعند انتهاء الوقت، يتوقف الجهاز عن العمل، ثم تسمع صوت صغير.

إرشادات: لا يمكن استخدام الزر “Vacuum” والزر “P esluP” أثناء تشغيل هذا الوضع!

٣. زر عمل المربي “Jam”

لف المقبض (٣) إلى الوضع “Jam” أثناء تشغيل “وضع الاستعداد”، ثم اضغط على الزر “Start/stop”. سيقوم الجهاز تلقائيًا بمزج الطعام وفقًا للإعداد الافتراضي. وعند انتهاء الوقت، يتوقف الجهاز عن العمل، ثم تسمع صوت صغير.

إرشادات: لا يمكن استخدام الزر “Vacuum” والزر “P esluP” أثناء تشغيل هذا الوضع!

الزر “Start/Stop”(٤): للبدء أو للتوقف عن العمل.

الزر “Pulse”(٥):

استمر في الضغط على هذا الزر للسماح للجهاز بالمزج بأعلى سرعة في الحال. إرشادات: إن أطول وقت للضغط على الزر “Pulse”(٥) هو دقيقتين. بعد انتهاء الوقت، يعود الجهاز إلى وضع “الاستعداد”.

زر التفريغ “Vacuum”(٦):

اضغط على الزر تفريغ “Vacuum” أثناء تشغيل “وضع الاستعداد”، حيث يضاء ضوء الزر “Vacuum” والزر “Start/stop”. سيقوم الجهاز تلقائيًا بتفريغ كوب المزج. وعند انتهاء الوقت، يتوقف الجهاز عن العمل، ثم تسمع صوت صغير. ثم يعود الجهاز إلى وضع الاستعداد في النهاية.

إرشادات:

يظل ضوء المؤشر (٧) يومض أثناء عملية التفريغ. بعد انتهاء عملية التفريغ، يبقى ضوء المؤشر (٧) مضاءً. ملحوظة: وقت عملية التفريغ مثل الوقت في “Smoothie”.

كيف تستخدم الجهاز

تركيب الشفرة:



قم بتركيب الحلقات المانعة للتسرب وقاعدة الشفرة وفقا للشكل أعلاه.

استخدام الجهاز



١. قم بتركيب الحلقات المانعة للتسرب وسدادة الغطاء وفقا للشكل أعلاه.
٢. افتح غطاء التفريغ (٨)، وقم بتركيب كوب المزج أعلى الجهاز الرئيسي.
٣. أضف الطعام في كوب المزج، ثم قم بتركيب الغطاء.
٤. أغلق غطاء التفريغ (٨).
٥. قم بتوصيل القابس بالكهرباء واضغط على المفتاح On/off.
٦. لف المقبض (٣) مرة أخرى إلى وضع "0".
٧. حدد الوظيفة التي تحتاجها. وسيبدأ الجهاز في العمل.
٨. بعد أن يتم تحضير الطعام بشكل جيد، افتح غطاء التفريغ (٨) وانزع كوب المزج من الجهاز الرئيسي.

تحذير:

١. إن الشفرات حادة للغاية! استخدمها بحذراً!
٢. لا تقم بمزج أكثر من ١ لتر من الطعام السائل؛ خليط الحليب على سبيل المثال!
٣. لفتح الغطاء (١٦) بعد التفريغ: قم أولاً بفتح صمام التهوية (٧-١). ثانياً افتح غطاء التفريغ (٨). ثالثاً، انزع الغطاء الرئيسي (١٧) وكوب المزج. وأخيراً افتح الغطاء.

التنظيف

١. افصل الجهاز من الكهرباء قبل التنظيف.
٢. قم بتنظيف الجهاز بقطعة قماش مبللة فقط.
٣. لا تقم بغمر وحدة المحرك في المياه!
٤. إن الشفرات حاجة للغاية! تعامل معها بحذر!
٥. بعد الاستخدام، اشطف الملحقات على الفور.

وصف الأعطال وحل المشكلات

رقم	وصف العطل	الحل
١	في حالة استخدام الزر "Vacuum" (٦)، يظل يومض كل من مؤشر الزر "Vacuum" والزر "Start/stop" كما ستسمع صوت صغير.	يرجى اتباع الخطوات التالية: قم أولاً بإيقاف المنبه بإحدى الطرق التالية: اضغط على الزر "Start/stop". افتح غطاء التفريغ ثم أغلقه. (أو فك كأس المزج ثم أعد تركيبه). لف المقبض (٣) إلى الوضع "٠". اضغط على الزر "Vacuum". ثم اضغط على الزر "Vacuum" مرة أخرى. إذا لم تنجح الخطوات السابقة، يرجى إعادة تشغيل الجهاز، ثم اضغط على الزر "Vacuum" مرة أخرى بعد ٦٠ ثانية. إذا لم يعمل الجهاز أيضاً بعد الخطوات السابقة، يجب إرسال الجهاز إلى مركز الخدمة المعتمد للصيانة.
٢	في حالة استخدام "smoothie" أو "Nutri blending"، يظل الزر "Start/stop" يومض كما ستسمع صوت صغير.	يرجى اتباع الخطوات التالية: قم أولاً بإيقاف المنبه بإحدى الطرق التالية: اضغط على الزر "Start/stop". افتح غطاء التفريغ ثم أغلقه. (أو فك كأس المزج ثم أعد تركيبه). لف المقبض (٣) إلى الوضع "٠". اضغط على الزر "Vacuum". ثم أعد تشغيل الخاصية "smoothie" أو "Nutri blending"، مرة أخرى. إذا لم تنجح الخطوات السابقة، يرجى إعادة تشغيل الجهاز، ثم أعد تشغيل الخاصية "smoothie" أو "Nutri blending"، مرة أخرى بعد ٦٠ ثانية. إذا لم يعمل الجهاز بعد الخطوات السابقة، يجب إرسال الجهاز إلى مركز الخدمة المعتمد للصيانة.

وصف الأعطال وحل المشكلات

الطعام	أقصى كمية	وقت التشغيل	السرعات	التحذير
جزر	٧٠٠ جرام	٣٠ ثانية	0	١٠*١٠*١٠ سم
مياه	٨٠٠ جرام			-

التخلص من الجهاز الصديق للبيئة



يمكنك المساعدة في حماية البيئة!
يرجى تذكر احترام القوانين المحلية: تُسلم الأجهزة الكهربائية
التي لا تعمل إلى مركز التخلص من النفايات المناسب.



ELARABY



19319

www.elarabygroup.Com



Tornado

Processing Guide

Food	Maximum	Operation time	Speeds	Preparation
Carrots	700g	seconds 30	5	15x15x15mm
Water	800g			-

Environment friendly disposal

You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal center.



Cleaning

1. Unplug the appliance before cleaning.
2. Clean the appliance only with a damp cloth.
3. Do not immerse the motor unit in water!
4. The blade is very sharp! Handle with care!
5. After use, rinse the accessories right away.

No	Fault description	Solution
1	While using "Vacuum" the ,(6) button indicator of "Vacuum" button and "Start/stop' button keep flashing, accompanied by sound "beep" .alarm	:Please follow below steps :First remove alarm by one of following ways .Press "Start/stop" button Open vacuum cover and then close it. (Or (.remove and reinsert the stirring cup ."back to "O (3) Rotate the knob .Press "Vacuum" button .And then press "Vacuum" button again If previous operations don't work, please restart the appliance, then press "Vacuum" .seconds 60 button again after If above operations still don't work, the appliance must be sent to the approved .service centre for repairing
2	While using "smoothie" or "Nutri blending", "start/stop' button keep flashing, accompanied by sound "beep" .alarm	:Please follow below steps :First remove alarm by one of following ways .Press "Start/stop" button Open the vacuum cover and then close it. (Or (.remove and reinsert the stirring cup ."back to "O (3) Rotate the knob .Press "Vacuum" button And then restart "smoothie" or "Nutri .blending"function again If previous operations don't work, please restart the appliance, then restart "smoothie" or "Nutri blending" function again .seconds 60 after If above operations still don't work, the appliance must be sent to the approved .service centre for repairing

How to use the appliance

Assemble the blade:



Assemble the seal rings and blade seat according to above figure.

Use the appliance



1. Assemble the seal rings and lid of the cover according to above figure.
2. Open the vacuumcover (8), and install the stirring cup on the main appliance.
3. Add the food in the stirring cup, and then install the cover.
4. Close the vacuum cover (8).
5. Plug in and press "On/Off" switch on.
6. Rotate the knob (3) back to "O" position.
7. Select the function you need. The appliance starts to work.
8. After the food is well processed, open the vacuum cover (8) and remove the stirring cup from the main appliance.

Caution:

1. The blade is very sharp! Handle with care!
2. Don't stir liquid foods such as milk mixture more than 1L at one time!
3. To open thecover (16) after vacuuming process: Firstlyopen the vent valve (7-1). Secondly open the vacuum cover (8). Thirdly remove the centre cover (17) and the stirring cup. And last open the cover.

Button introduction

2) The indicator light (7) keeps flashing during the vacuuming process period. After vacuuming process ends, the indicator light (7) keeps lighting.

Remarks: Vacuuming process time is same with **"Smoothie"**.

5. **"Ice crushing"** : You may use this function to crush ice into small pieces. Rotate the knob (3) to **"Ice crushing"**  under **"stand-by status"** mode, and then press **"Start/stop"** button. The appliance will automatically mix the food according to the default setting. When the time is up, the appliance stops working, then sound **"Beep"** will be heard.

Tips: The **"Vacuum"** button and **"Pulse (P)"** button can't be used under this operation!

6. **"Jam"** :

Rotate the knob (3) to **"Jam"**  under **"stand-by status"** mode, and then press **"Start/stop"** button. The appliance will automatically mix the food according to the default setting. When the time is up, the appliance stops working, then sound **"Beep"** will be heard.

Tips: The **"Vacuum"** button and **"Pulse (P)"** button can't be used under this operation!

"Start/Stop" button (4): To start or stop working.

"Pulse (P)" button(5):

Hold this button to let the appliance stir at highest speed instantly.

Tips: The longest working time for holding **"Pulse (P)"** button is 2 minutes. After the time is up, the appliance goes back to **"stand-by status"** mode.

"Vacuum" button (6):

Press **"Vacuum"** button under **"stand-by status"** mode, the light of **"Vacuum"** button and **"Start/stop"** button is on. The appliance will automatically vacuumize the stirring cup. When the time is up, the appliance stops working, then sound **"Beep"** will be heard. At last the appliance goes back to **"stand-by status"** mode.

Tips:

The indicator light (7) keeps flashing during the vacuuming process period. After vacuuming process ends, the indicator light (7) keeps lighting.

Remarks: Vacuuming process time is same with **"Smoothie"**.

Button introduction

“On/Off” switch (1):

Slide it to turn the appliance power ON or OFF.

Knob (3):

1. Rotate the knob from “O” to “+”: Select the speed (1 to 5) and let the appliance stir.

Tips:

1) The “**Vacuum**” button and “Pulse (P)” button can’t be used under this operation!

2) If the appliance works between “O” and “+”, the longest working time is 2 minutes! The appliance will stop working after 2 minutes.

2. Rotate the knob to “O”: Let the appliance stop working, or let the appliance go back to “stand-by status” mode.

3. “**Smoothie**” : You may use this function to make delicious fruits **smoothie**.

Rotate the knob (3)  to “Smoothie” under “stand-by status” mode, and then press “Start/stop” button. The appliance will automatically firstly vacuumize the stirring cup and then mix the food according to the default setting. When the time is up, the appliance stops working, then sound “Beep” will be heard.

Tips:

1) The “**Vacuum**” button and “Pulse (P)” button can’t be used under this operation!

2) The indicator light (7) keeps flashing during the vacuuming process period. After vacuuming process ends, the indicator light (7) keeps lighting.

Remarks: Vacuuming process time table as below for reference.

No.	Food capacity	Time required
1	Empty cup	50 seconds
2	1.5L liquid food	20 seconds

4. “Nutri blending” :

Rotate the knob (3) to “**Nutri blending**”  under “stand-by status” mode, and then press “**Start/stop**” button. The appliance will automatically firstly vacuumize the stirring cup and then mix the food according to the default setting. When the time is up, the appliance stops working, then sound “**Beep**” will be heard.

Tips:

1) The “Vacuum” button and “Pulse (P)” button can’t be used under this operation!

Product instruction

Model No.: LW-9688G1

PARTS NAME: 220-240V~ 50/60Hz 1000W

1. "On/Off" switch
2. Main appliance
3. Knob
4. "Start/Stop" button
5. "Pulse (P)" button
6. "Vacuum" button
7. Indicator light
- 7-1. Vent valve
8. Vacuum cover
9. Spatula
10. Brush
11. Blade seat
12. Seal ring 1
13. Stirring cup (Max. 1.5L) (Tritan)
14. Seal ring 2
15. Seal ring 3
16. Cover
17. Centre cover (with soft seal cover)



Working status introduction

"Stand-by status" mode:

Plug in and power on, and the appliance enter in "stand-by status" mode:

1. The indicator lights of "Pulse (P)" button and "Vacuum" button keep lighting.
2. The breathing light of "Start/stop" button is working.

Tips: If you don't do any operation with the appliance in 3 minutes under "stand-by status" mode, all the indicators will go out. And then the appliance automatically goes into "Sleeping mode".

You may use the one of the following ways to exit from "Sleeping mode":

1. Press "Start/stop" button.
2. Rotate the knob (3) back to "O" position.
3. Raise the vacuum cover and then recover it.

Safety Instructions

16. The Spatula is only used for moving the food out of the bowl. Don't use it while the blade is running.

17. To avoid the food reflux and well protect the vacuum function of the appliance, do not vacuumize the food which has been stirred. We recommend the Maximum quantity for vacuumizing the food is no more than 1000ml.



18. Don't put the hot water or food over 40°C into the vacuum container.

19. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Product instruction

LW-9688G1 is a revolutionary high-speed vacuum blender that is set apart from other available blenders.

Product features:

1. Intuitive and easy to use.
2. Breathing light design feature.
3. BPA-free Tritan stirring cup.
4. Easy to clean.
5. Vacuum function: It helps food to reduce oxidation and preserve the nutrients and goodness.
6. Suitable for making fruits juice, smoothie, milkshake, sauce etc.

Safety Instructions

1. The appliance is designed to process suitable ingredients and is for household use only.
2. Before plugging into a socket, check whether your voltage corresponds to the rating label of the appliance.
3. Don't let the motor unit, cord, or plug get wet.
4. Do not misuse the product. It may cause injury if misuse.
5. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. The attachments continue to rotate after being switched off. Wait until the attachments come to a full stop before handling the appliance.
8. Don't let excess cord hang over the edge of the table or worktop or touch hot surface.
9. Short-time operating. Don't use the appliance longer than 2 minutes at one time. The appliance will automatically stop running after 2 minutes continuous working!
10. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
11. Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
12. Children shall not play with the appliance.
13. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
14. Be careful if hot liquid is poured into the food processor as it can be ejected out of the appliance due to a sudden steaming.
15. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other similar working environments;
 - in agricultural working environments;
 - by customers in hotels, motels etc. and similar establishments;
 - in bed-and breakfast type environments.

TORNADO

Model
TVBL-1000LI



Thanks for Choosing Tornado
Vacuum Blender

ELARABY



19319

www.elarabygroup.com



Tornado